Part Number SC59-001



## Strut Cap Washer/Bush

NOTE – Installation is always recommended by a competent technician. Failure to install properly may result in wear to strut cap or shock absorber shaft.

- 1. Install as per order in diagram
- 2. The MRR Adjustable nut will go on last if the shock absorber is an MRR adjustable shock absorber.
- 3. Make sure the strut cap is aligned as per OEM shock absorber to fit back into the vehicle. For alignment on the strut cap see diagram.




Not enough thread showing. The top bush may appear tight as there is force against it form the coil spring, however the bottom bush will still be loose.



The top bush and the bottom bush is tight now.

**Dobinsons Springs and Suspension Head Office** – Rockhampton, **AUSTRALIA** Brisbane – Sydney – Melbourne - Adelaide USA sales@dobinsonusa.com

admin@dobinsons.com

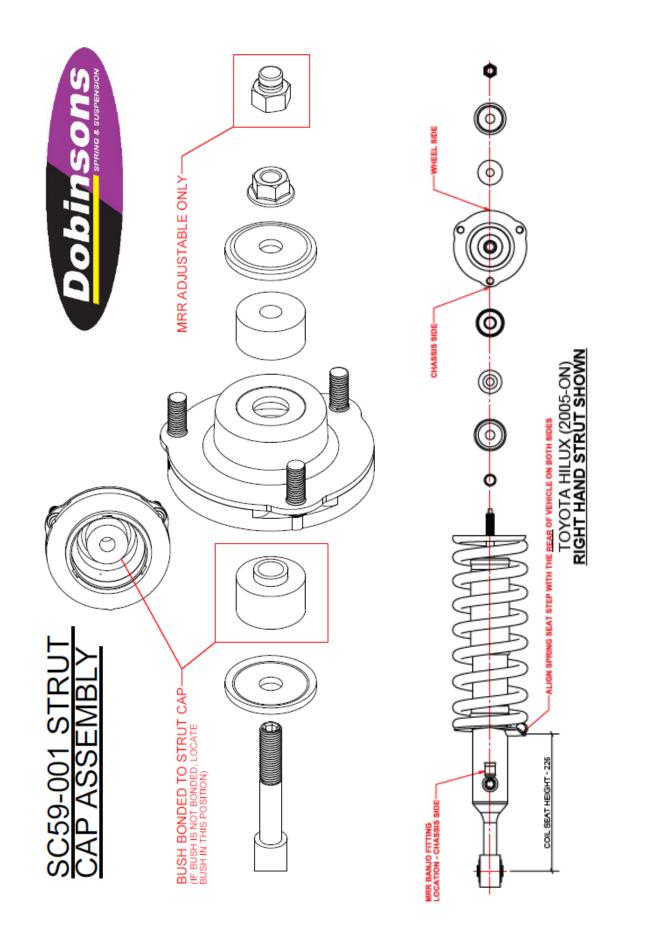

**Dobinsons Springs and Suspension Head Office** – Rockhampton, **AUSTRALIA** Brisbane – Sydney – Melbourne - Adelaide USA sales@dobinsonusa.com