

Diff Drop Kit Install Guide
Part Number: DD19-592K
Fitment: Ford Bronco 2021 on



This Diff Drop Kit will take approximately 1 hour to install

Dobinsons products should be installed by a qualified installer, and it is the installers responsibility to ensure correct fitment.


Dobinsons is not responsible for any damage incurred to the vehicle during installation.

1. Securely Support the diff before removing any bolts / nuts.

2. Remove the frame side bracket



3. Remove the diff tube bolt.

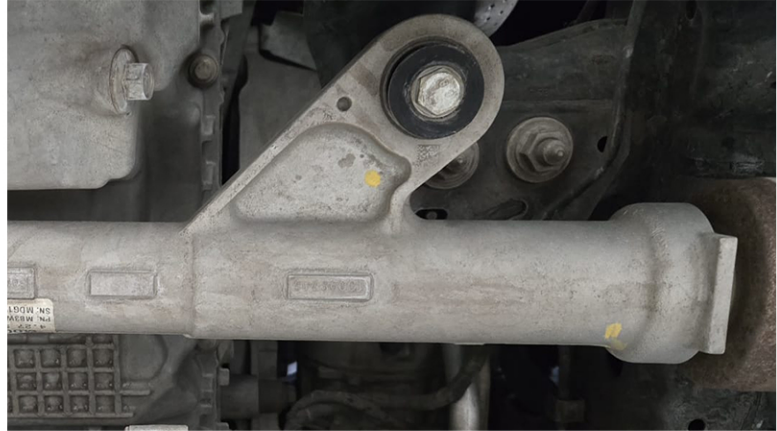

4. Install the provided diff bracket reusing factory hardware (do not tighten yet).

5. Install two of the provided silver spacers on top of the diff tube bracket and one under.

6. Torque all hardware to OEM Spec.

