


## How to use this template:

1. Print "Actual size" (no scaling) with paper size set to Letter Landscape.
2. Glue this page onto a suitable piece of cardboard.
3. Cut along the outline below. *This includes a 0.1" clearance gap required for the brake system to fit under your wheel.*
4. Remove a wheel and lay it face down.
5. Fit the "Wheel Spigot" section into your wheel's center hole.
6. Check that the template cutout clears the wheel surfaces to ensure sufficient clearance for the new brake system. *Take careful note of balancing weights.*

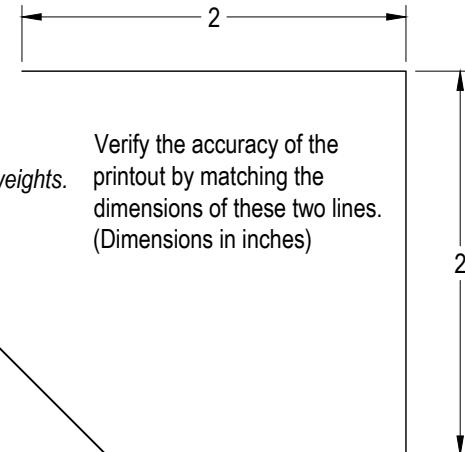

Powerbrake: X6S / 330x33mm  
Vehicle: Toyota Land Cruiser J60 / J70 Series  
Platform: TOY14F

Wheel Spigot = 4.17"



|  |  |
|--|--|
|  | <a href="http://www.powerbrakeglobal.com">www.powerbrakeglobal.com</a> |
| <b>WHEEL FITMENT TEMPLATE</b>  |  |
| VEHICLE:   | Toyota Land Cruiser J60 / J70 Series                                   |
| KIT TYPE:  | X6S / 330x33mm   |
| PLATFORM:  | TOY14F   |
| It is critical to accurately check wheel clearance with this template before purchasing your Powerbrake kit. |  |